

APOLLO 8.1

LS4004 SCAN GUN SETUP

NOTE: The Symbol Technologies, Inc. bar code readers come preprogrammed by IRI. If, however, you have not purchased your bar code reader from IRI, you must program your bar code reader to read UPC bar codes. If it is necessary to program the bar code reader, scan the bar codes shown in the following figure, in sequence.

For Use With Scanner Gun Model LS4004 Only



SET ALL DEFAULTS



DO NOT TRANSMIT UPC-A CHECK DIGIT



DO NOT TRANSMIT UPC-E CHECK DIGIT



CONVERT UPC-E TO UPC-A (ENABLE)



SCAN OPTIONS



<DATA><SUFFIX>



ENTER